



Must install PF-model on top of the tank

It will pump the oil from the bottom of the tank, where the pollution is located